

## 868SLH Keypad

---

**Please note: changing the channel access code (end user code) first will automatically change the programming code (master code). To have a separate Access code and programming code, change the programming code first.**

### **To change channel access code.**

Simultaneously press and hold buttons 1 & 3. After the three beeps, press and hold buttons 4 & 6. After a further three beeps, enter the programming code (factory default is 12345). After the long beep enter your new 5 digit access code. After two beeps, enter the new code again. A long beep and the lights going out signify that the code has been successfully changed.

### **To teach a code to a decoder.**

Simultaneously press and hold 1 & 3. After the three beeps, hold buttons 1 & 2. After a further three beeps, enter your access code. After the long beep, press and hold the required channel button (1,3 A or B). Also press and hold the learning button on your decoder. After the LED on your decoder stays on steadily, let go of your decoder button and then your keypad button. When the lights have gone off on your keypad, enter your access code, then press the channel button a couple of times and test that the decoder card is recognising the channel.

### **To teach a code to a transmitter.**

Follow the steps above. When you are holding down the required channel button, put your transmitter next to the keypad. Press and hold the required button on your transmitter. The LED on your transmitter will flash twice and go out if it has successfully taken the code.

### **To take a code from a transmitter.**

Press P1 and P2 on your transmitter. When the LED flashes, let go. Then press and hold the button you want to code to the keypad. Enter your channel access code on your keypad and then press and hold the channel button (1,3,A or B). Successful storage of the code is signified by a double beep and the lights on the keypad going out .

- **WARNING! The following process, once completed, cannot be reversed. The keypad will no longer be able to give or receive new channel codes!\***

### **To set keypad as a slave.**

Simultaneously press and hold buttons 1 & 3. After the three beeps, press and hold buttons 7 & 9. After a further three beeps enter your programming code. After the long beep, your keypad is now a 'slave'.

### **To change the programming code.**

Simultaneously press and hold buttons 1 & 3. After the three beeps, press and hold buttons 7 & 8. After a further three beeps, press and hold buttons 8 & 9, after a further three beeps, enter your existing programming code. After the long beep, enter your new programming code.

After the double beep, enter the new code again. After the long beep your code has changed.

### **To reset a keypad**

To reset to the factory default, press and hold buttons 1 & 3. After the beeps, press and hold buttons 7 & 8. After a further three beeps, press and hold buttons 2 & 0. After the next three beeps enter your programming code, After the long beep, your keypad is reset.

**N.B If you change the programming code, keep a note of the code somewhere safe. There is no way of resetting the keypad without it.**